


# Installing LED Tube T8 with an LED Starter (ONE SIDE POWER).

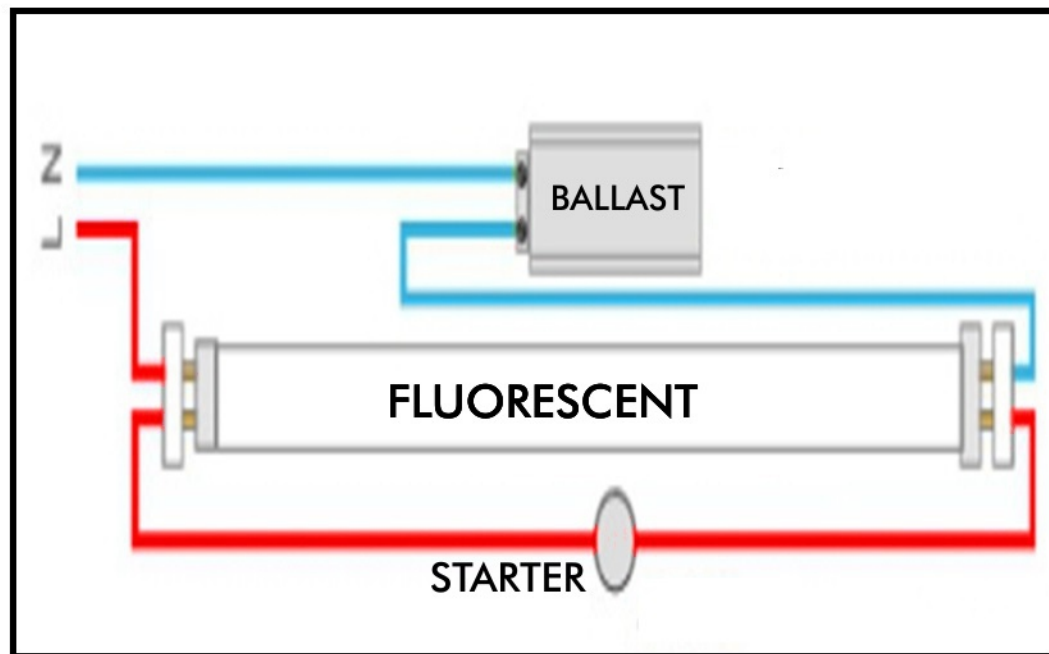


Ferromagnetic Fluorescent tubes have a starter outside of the ballast. Alternatively, there's a way to install LED Tubes using an LED starter (included with the product). Connecting these lights is simple, just switch the old starter with the LED starter, the fluorescent tube with the LED Tube and remove the ballast (if it has one).


1°) turn OFF the power, making sure there is no electrical current present



2°) Remove the condensor

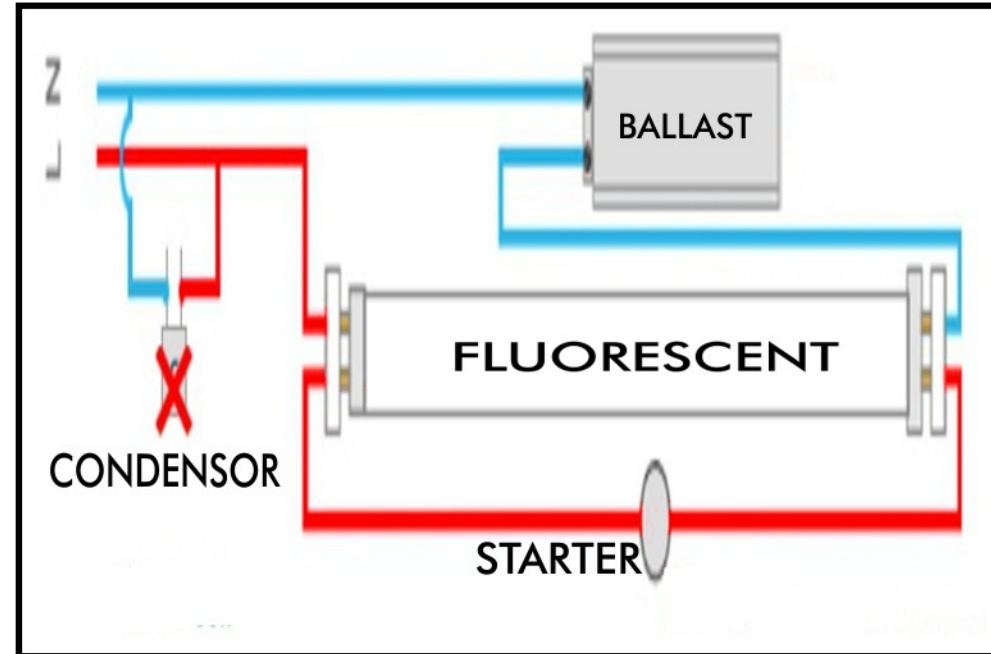

3°) Remove the switch the condensador with the LED Starter and the fluorecent tube with the LED Tube. Turn ON the power to test if your new LED Tube is working ok.

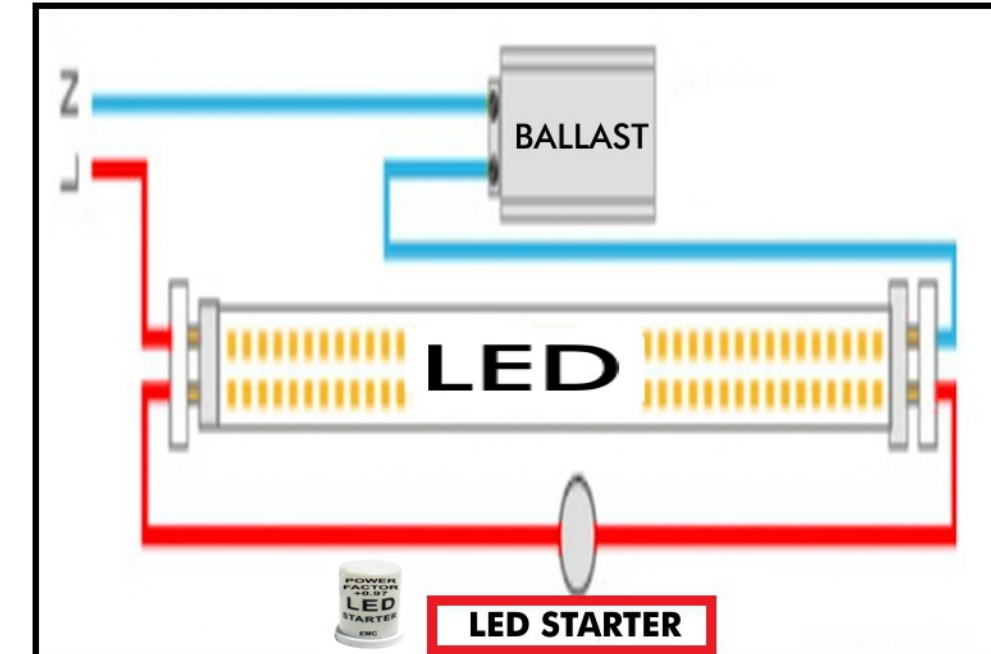

**CAUTION:**

ALWAYS CUT THE ELECTRIC TENSION

